






Tri-Kleen[™] 500UV Portable Air Filtration Unit


HEPA FILTRATION AND NEGATIVE PRESSURE MACHINE

Negative pressure rooms are used in healthcare settings to contain airborne contaminants within an infected occupant's room. The Tri-Kleen $^{\text{TM}}$ 500UV is a negative air machine with a built-in HEPA filtration system to provide the most effective mechanical filtration available.

This lightweight device creates negative pressure rooms for healthcare use, removing contaminated air from a closed controlled area. With HEPA filters contained within the unit, potentially dangerous particles are removed from the exhausted air at peak efficiency.

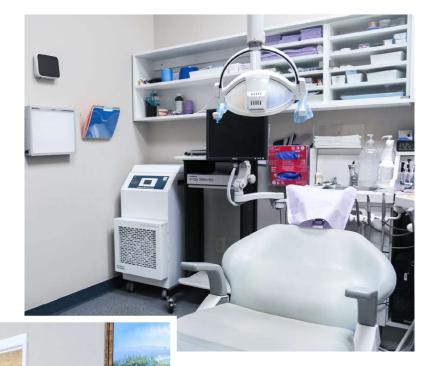

Tri-Kleen[™] 500UV HEPA Filtration Machine

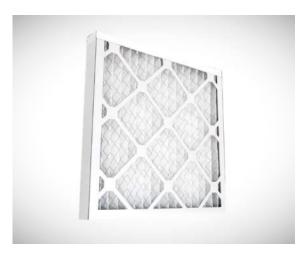


PRE-FILTER

TRI-PLEAT ULTRA is a MERV 9 pre-filter with initial resistance of 0.20" W.G. (50 PA) at the recommended airflow of 500 FPM (2.54 m/sec). Final resistance is 1.0" W.G. (249 PA).



HEPA FILTER

The cylindrical HEPA filter has initial resistance of 1.20" – 1.24" w.g. at 500 CFM. The minimum initial efficiency is 99.97% on 0.3 micron size particles. The media is standard micro-glass HEPA Media.

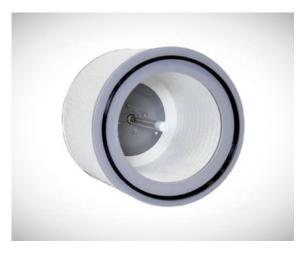

UV-C LIGHT

A 39W UV-C Germicidal Bulb is combined with a HEPA filter to increase the effectiveness of air cleaning from pathogens, such as bacteria and viruses.


Tri-Kleen™ 500UV Air Management

HIGHLY FLEXIBLE APPLICATION OPTIONS


The Tri-Kleen[™] product gives public health officials and hospital staff the ability to turn a COVID-19 patient's room into a negative pressure environment, allowing field hospitals, temporary care units, nursing homes or ad-hoc locations the ability to maintain safety for patients and frontline staff.

NEGATIVE PRESSURE

To prevent particles from escaping from the room to be cleaned, it can be operated in negative pressure. Operation in negative pressure requires a solid technical ventilation setup. In this case, the incoming air must in any case be highly pure. We would be happy to support you with this request.




Application with negative pressure: Tri-Kleen™ 500UV in negative pressure room with air hose leading outside




Application with negative pressure:
Tri-KleenTM 500UV outside with air hose into the negative pressure room*

POSITIVE PRESSURE

Positive pressure rooms are used for applications where the room's interior must remain clean and will not be contaminated by polluted air, for example through airborne molecular contaminants or particles transported by microbes.




Application with positive pressure:Tri-Kleen™ 500UV outside with air hose into the positive pressure room



Application with positive pressure:Tri-Kleen™ 500UV in positive pressure room with air hose leading outside*

CIRCULATING AIR


Closed-off rooms can be continuously cleaned of particles in circulation mode, which significantly improves the air quality.



Application with circulating air: air cleaning in closed areas using circulating air mode

^{*}Tri-Kleen comes with one exhaust grille located on top of unit. Intake collar is not included

Tri-KleenTM 500UV Technical Information

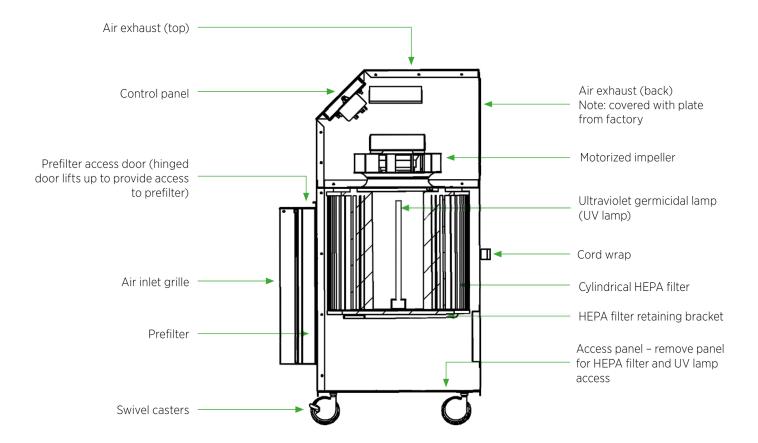


TRI-KLEEN™ 500UV FEATURES

Tri-Kleen™ 500UV has an optional exhaust collar that will allow for a flex duct to be attached and allow for the air to be exhausted to created a negative pressure in a space to allow for containment in a specific space.

OTHER FEATURES INCLUDE:

- HEPA filter
- Three speed settings, from 90 cfm to 500 cfm
- Quiet (52 dBA 59 dBA)
- Filter loading indicator with audible alarm
- Smooth-rolling swivel casters with two front brakes
- LCD touch screen with state-of-the-art touch pad controls

Tri-Kleen[™] 500UV Technical Information

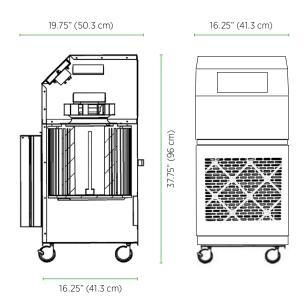

| Feature | Specification |
|----------------------------|--|
| Net weight with filters | 65 lbs (29.5 kg) |
| Shipping weight | 83 lbs (37.6 kg) |
| Unit dimensions | W 16.25" x D 19.75" x H 37.75" (W 41.3 cm x D 50.3 cm x H 96 cm) |
| Shipping carton dimensions | W 20" x D 24" x H 44" (W 50.8 cm x D 61.0 cm x H 101.6 cm) |
| Power supply required | 120 volts AC, 60 Hz, 15 amp circuit. |
| Max. current draw | 2.5 amps |
| Automatic restart | Yes - the unit will automatically restart after temporary power interruption |
| Cabinet material | 0.050" (1.3 mm) thick powder-coated white aluminum |
| Control panel | LCD touch screen controls |
| Circuit breaker | 5-amp integrated circuit breaker |
| Filter loading indicator | Filter loading visual alarm on LCD touch screen with audible alarm (audible alarm can be enabled/disabled) |
| Air flow ratings | 3 speed settings produce an air flow range of 90 CFM to 500 CFM (150 m³/h - 850 m³/h) |
| Power cord | 10' (3 m) long, 14/3 AWG SJT hardwired power cord |
| Sound level | 52 dBA - 59 dBA |
| Prefilter | Standard prefilter: 2" (5 cm) deep pleated MERV 9 pre-filter. |
| HEPA filter | Cylindrical 99.97% efficient against 0.3 µm particles at max. air flow, with UV lamp integrated into the filter |
| Exhaust outlet | One exhaust grille located on top of unit. Exhaust grille dimensions: 12" x 8" (30.5 cm x 20.3 cm) Optional 8" nominal diameter (20.3 cm) exhaust collar included for connecting round ducting |



Tri-Dim Filter Corporation is committed to continual product development - all descriptions, specifications and performance data are subject to change without notice. Tri-Dim products are manufactured to exacting criteria – there can be a ±5% variance in filter performance.

Order Today! In Kansas and Missouri Contact:



éPlus Environmental Solutions LLC (913) 915-1681 | https:epluses.com



